

JetTrac™ Belt Case Replacement

Parts List:



Belt Case



Allen Wrench 5mm



Allen Wrench 2mm

Allen Wrench



Required Tools

- Loosen screws with a 5mm Allen Wrench.
- Push down Case, Handle, and Rail assembly.
- Loosen small screws on all three sides of post's groove with a 2mm Allen Wrench to remove lid.
- Remove Lid, Rail assembly, Handle, and Belt Cases.
- Switch non-functional Belt Case with a fully functional Belt Case.
- Slide Belt Cases, Handle and Rail assembly down the grooves of the post and place lid on top of post.
- Tighten small screws to secure lid.
- Raise Handle, Rail assembly and Cases to desired height.
- Tighten screws to secure Rail assembly, Handle and Cases.

